



# POP UP DISPLAY—QUICK START INSTRUCTIONS




1. Remove frame from case and place on floor. Place frame with the slider(s) for light on the top facing you.

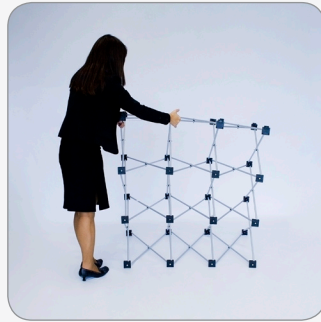

2. Grasp upper ends of frame and pull up and outwards. Continue pulling up and outward until the frame is fully expanded.

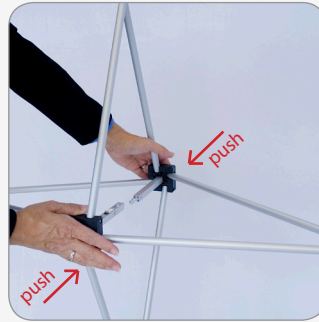

3. To close the frame: Push from the outside of the frame until it connected.

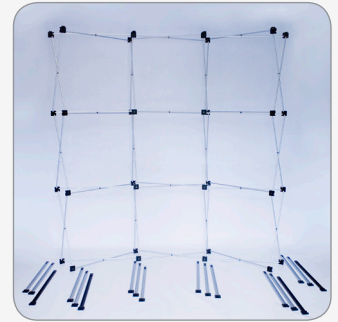


4. Set up the channel bars to the frame. 4 black channel bars go on the 4 outer lower positions (There's velcro which holds down the lower corner of the endcaps) and rest of channel bars go on the middle lower positions and all top positions.



5. Make sure to flip the magnet side to be the front side when you slide it to the frame.




6. Start the top of the frame, insert the pointed end of the channel bar into the slot in the bracket at the top of the frame.

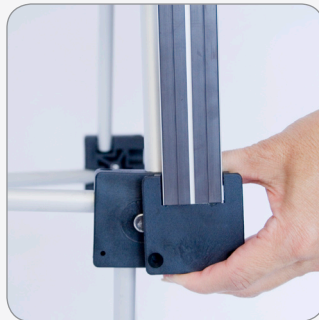

7. Slide the bottom of the channel bar from right to left onto the metal peg. Continue with the middle and lower channel bars.




8. Center panels are wider than end panels.

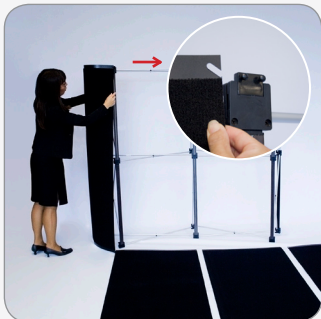

9. Lift end panel and guide front notch of plastic plate over front peg. Hook the other side on the panel peg at the back of the frame.



10. Slowly run your hands down the sides of the panel, attaching magnetic strips to the channel bars and straightening as you go.

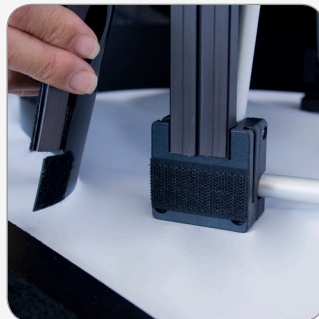


11. Attach the Velcro of the bottom of the panel to the black channel bar inserted to the frame.



12. Hold a center panel on its side edges about 1/3 of the way down from the top. Lift section and guide notches over the panel pegs on the top hubs. Slowly release the panel, allowing it to roll down the channel bars. Repeat for all center panels aligning them as you go.



13. To attach light, slide the bottom of the light to the light brackets on the top of the frame.

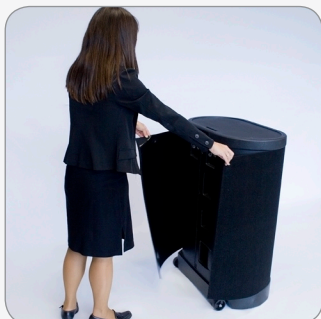

14. Wrap the panel for podium and attach the edges by velcro.



15. Place the top lid on the podium.



16. Finished!